


# CTDTCT™ Corner Trap

## Installation & User Guide

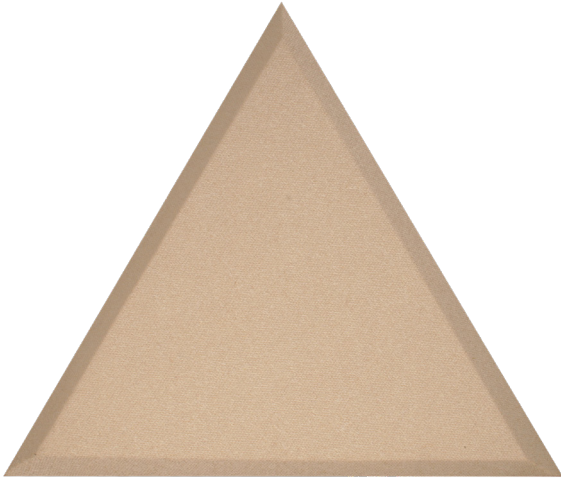

**CTDTCT Panel** - Front face. Installation of this panel assumes that all the corner mounted panels in a trihedral corner are in place prior to installing the CTDCT panel with the exception of one of the abutting horizontal corner panels.




SO Hex Driver & Snap-On Anchor




Cloud Anchor

Using a SO Hex Driver install two SNAP-ON Anchors into the rear surface of the panel, parallel to the bottom edge of the panel and inboard of the edge of the fabric covering. Install a single Cloud Anchor near the top tip of the panel just inside the fabric border.

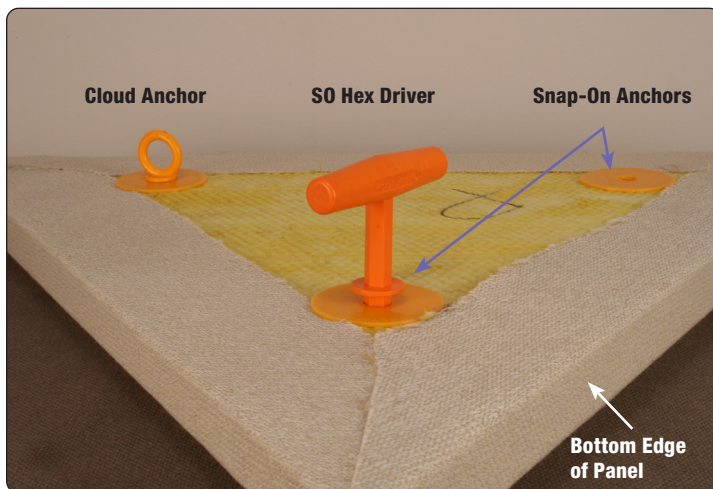


Rear of **CTDTCT Panel** with all three anchors installed.

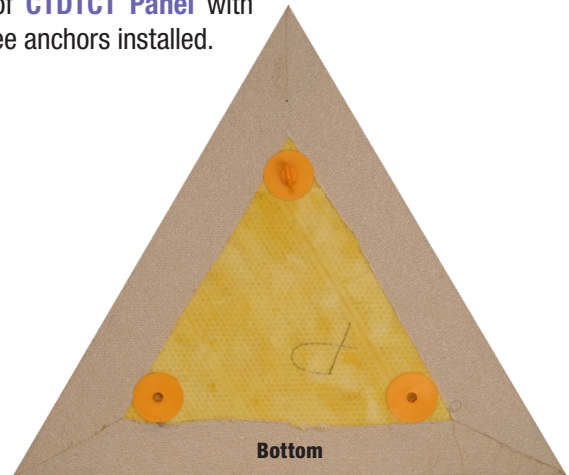

Bottom

Snap-On Anchor Ratchet Plug and hardware  
(shown in order of assy)

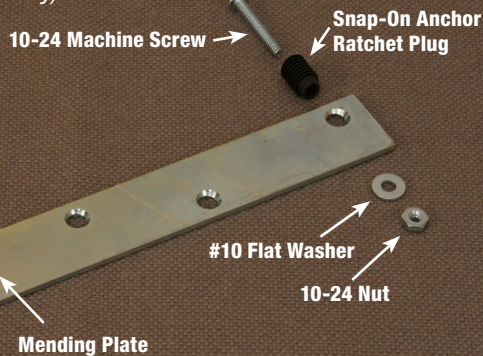

Mending Plate / Ratchet Plug assembly ready for installation into the Snap-On Anchor. Note the orientation of the Ratchet Plug flutes relative to the screw head.



**Auralex® Acoustics, Inc.**


1-800-959-3343 | 317-842-2600 | [Auralex.com](http://Auralex.com)  
9955 Westpoint Drive, Suite 101, Indianapolis IN USA 46256

**Real-World Acoustics®**





Push **Ratchet Plug / Mending Plate** assembly into the two **Snap-On Anchors** at the bottom edge of the panel. Orient the mending plate so that it is pointing down and overhangs the bottom edge of the panel

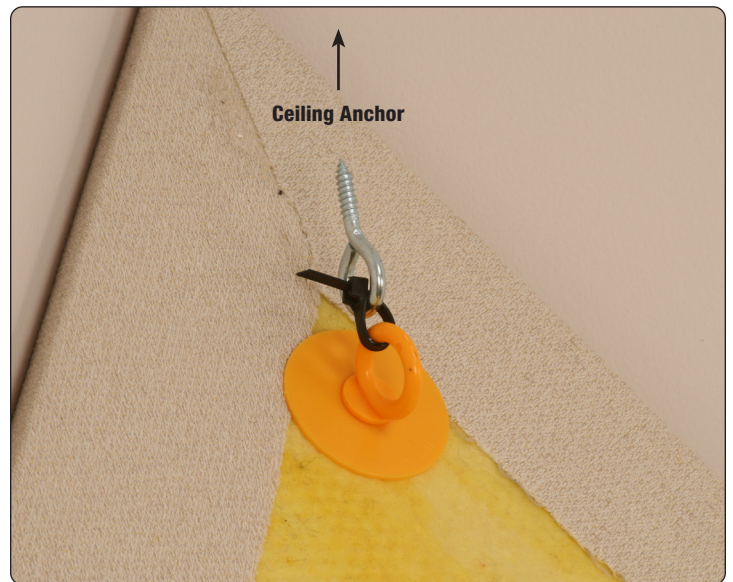

- Mount the appropriate screw anchor in the ceiling a few inches inboard from where the tip of the **CTDTCT Panel** touches the ceiling (user supplied).
- Insert the proper size screw eye into the ceiling anchor installed in the ceiling (user supplied).
- Install **CTDTCT** into the corner by resting the bottom edge of the panel on the top edge of the top vertical corner panel. The mending plates extending past the bottom of edge of the **CTDTCT Panel** will index these two panels relative to each other.
- Zip tie the ring of the **Cloud Anchor** at the upper tip of the **CTDTCT Panel** to the screw eye mounted in the ceiling end gently snug.
- Install the remaining horizontal corner panel that abuts the open side of the **CTDTCT Panel** to complete the installation.