


Thank you for purchasing **Studiofoam®** high performance acoustical absorption treatment that can easily be mounted to walls & ceilings.

- Prior to mounting, mark desired panel locations on the wall with small pencil marks or masking tape.
- If you need to cut your **Studiofoam**, use a straightedge and an electric carving knife. Don't force the knife; let the blades do the work.

EZ-Stick Pro™

Clean attachment points on the wall surface with Isopropyl alcohol (*avoid household cleaners*), wipe gently and let dry. Separate the **EZ-Stick Pro Tabs** from each other. Remove one of the paper release liners from the strip. Apply the tabs with very strong, uniform pressure (*heel of hand*) for 30 seconds on the rear of the panel near the outside edges, orient vertically for maximum holding strength. Remove the second paper release liner from the backside of the tab, position the panel with the target location on the wall and again press with very strong pressure for 30 seconds at each attachment location. Use 4 tabs for a 2' x 2' **Studiofoam** panel.

NOTE: EZ-Stick Pro Tabs are pressure sensitive, the greater the applied pressure, the better the adhesion. Adhesive failure could occur if proper installation procedure is not followed. Cleaning the wall surface and the use of very firm, uniform pressure (*heel of hand*) when applying the tabs to Studiofoam is critical!

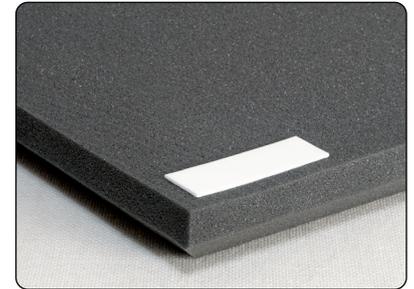

EZ-Stick Pro™ Tabs shown

CAUTION:



Adhesive failure could occur if proper installation procedure is not followed. Cleaning the wall surface and the use of **very firm, uniform pressure** when applying the tabs to **Studiofoam** and to the wall is critical!

Apply **very firm, uniform pressure** for 30 seconds in order to ensure the **EZ-Stick™ Pro Tabs** properly adhere to the **Studiofoam**. Not using adequate pressure will cause the **EZ-Stick Pro Tabs** to fail.

INITIAL APPLICATION (Without Applying Firm Pressure)




FINAL APPLICATION AFTER APPLYING FIRM PRESSURE



Other Mounting Options

- **Tubetak Pro™** and **Foamtak™** adhesives can also be used. Visit Auralex.com for more information.
- T-Pins or Finish Nails can be used to tack the panels in place for a quick installation with minimal wall damage. Sometimes larger nails or panel movement can cause the **Studiofoam** to tear, so this is usually best as a temporary installation method.

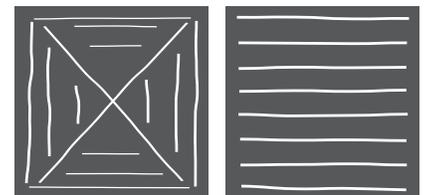

Typical Tubetak Pro™ application pattern

Tubetak Pro™ application for difficult to adhere to surfaces

NOTES:

- **EZ-Stick Pro Tabs** may not adhere well to some vinyl wallpapers. Apply to surfaces above 50° F (10° C). Adhesive could soften and lose adhesion above 105° F (40° C). **EZ-Stick Pro Tabs** are considered permanent and will damage the wall surface when removed.
- Both **Tubetak Pro** and **Foamtak** are considered a permanent installation. Removing the panel after the adhesive has cured can result in some damage to the **Studiofoam** and the mounting surface. Try using a sharp knife to carefully separate the panel from the adhesive to minimize tearing. Use a citrus based adhesive remover to clean the adhesive from the wall. **Auralex** is not responsible for any damage to walls, the ceiling or the overall structure that occurs during installation or removal of our products.

Auralex® Acoustics, Inc.

1-800-959-3343 | 317-842-2600 | Auralex.com
 9955 Westpoint Drive, Suite 101, Indianapolis IN USA 46256