

Thank you for purchasing Auralex® Studio6™ Bass Traps.

- Prior to mounting, mark desired panel locations on the wall with small pencil marks or masking tape.
- Clean the attachment points on the wall surface with isopropyl or denatured alcohol, wipe gently and let dry. Avoid household cleaners, as their surfactants will degrade the bonding power of the adhesives.
- Adhesive will be applied to the rear surface or rear miter of the **Studio6** for wall and corner applications, respectively.

### Tubetak Pro™ Liquid Adhesive


- Cut the tip off of the threaded nozzle feature on the front of the cartridge, close to the threads, and screw the nozzle onto the cartridge. Cut 1" off the tip of the **Tubetak Pro** nozzle for a large size opening and at an angle.
- Apply **Tubetak Pro** to the mounting surfaces of the **Studio6** and wall, gently flatten the bead using a putty knife.
- For best adhesion, carefully press your foam into place, applying moderate pressure for a minimum of 15 seconds to spread out the adhesive. Separate the foam from the wall for 2 to 5 minutes then reassemble with firm pressure.
- When adhesive is ready, align the **Studio6** panel at the desired location and firmly press in place.

### Stand Mounting

- Set up the stand and firmly tighten the pole into the base. Remove the star washer (if present) from the top of the stand. Extend the top tube and firmly tighten the adjustment collar.
- Remove waste from center of the **Studio6** creating a hole for the stand. Bend along the mid-line, face down on the edge of a table or counter. Reach into the gap and pull out the tube shaped piece of foam.
- Insert tube of stand into the hole in the center of the **Studio6** panel (assistance is recommended). Adjust to desired height.



Studio6 shown on stand

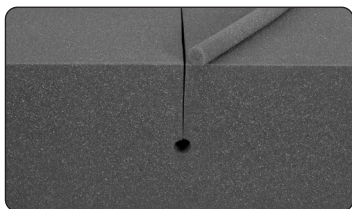

Studio6 with waste removed

#### ADHESIVE WALL MOUNTING



#### ADHESIVE CORNER MOUNTING



Figure 1.

### NOTES:

**Tubetak Pro** is considered a permanent installation. Removing a panel after the adhesive has cured can result in some damage to the **Studio6** and the mounting surface.

**Auralex** is not responsible for any damage to walls, floors, ceiling or the overall structure that occurs doing installation or removal of our products.

Try using a flat edge knife to carefully scrape the panel away from the wall to minimize tearing, and then use a citrus-based adhesive remover.