

T'Fusor™ Sound Diffusors

Installation & User Guide



Thank you for purchasing Auralex® T'Fusor™ Sound Diffusors

These are highly effective acoustic diffusion devices that can be easily wall or ceiling mounted and the T'Fusors are also sized to fit 2'x2' drop ceiling grids.

The T'Fusors are supplied with the Auralex EZ-Stick Pro™ peel & stick tabs.

Be advised that the EZ-Stick Pro Tabs are designed for permanent installations and will damage drywall and painted surfaces when removed. For installations that require little or no damage to the wall surface we recommend the use of Auralex EZ-Stick Tabs. See your Authorized Auralex dealer for details.

Mark the target position on your wall or ceiling where the panel will be mounted using small pencil marks, pieces of masking tape or any similar non marring method. Be sure the wall surface where the EZ-Stick Pro Tabs™ will adhere is free of dirt, dust or other oily contaminants. The use of rubbing alcohol to spot clean the wall where the tabs will adhere is recommended. Avoid the use of household cleaners.

Remove one of the release layers on the EZ-Stick Pro Tabs and affix it to the rear side of the perimeter flange at the desired locations, usually near the corners.

Real-World Acoustics®

1-800-959-3343 | 317-842-2600 | Auralex.com
9955 Westpoint Drive, Suite 101, Indianapolis IN USA 46256

938-1212.T'Fusor User Guide (01/13/2020 - 8:45 AM)

T'Fusor™ Sound Diffusors

Installation & User Guide



Thank you for purchasing Auralex® T'Fusor™ Sound Diffusors

These are highly effective acoustic diffusion devices that can be easily wall or ceiling mounted and the T'Fusors are also sized to fit 2'x2' drop ceiling grids.

The T'Fusors are supplied with the Auralex EZ-Stick Pro™ peel & stick tabs.

Be advised that the EZ-Stick Pro Tabs are designed for permanent installations and will damage drywall and painted surfaces when removed. For installations that require little or no damage to the wall surface we recommend the use of Auralex EZ-Stick Tabs. See your Authorized Auralex dealer for details.

Mark the target position on your wall or ceiling where the panel will be mounted using small pencil marks, pieces of masking tape or any similar non marring method. Be sure the wall surface where the EZ-Stick Pro Tabs™ will adhere is free of dirt, dust or other oily contaminants. The use of rubbing alcohol to spot clean the wall where the tabs will adhere is recommended. Avoid the use of household cleaners.

Remove one of the release layers on the EZ-Stick Pro Tabs and affix it to the rear side of the perimeter flange at the desired locations, usually near the corners.

Real-World Acoustics®

1-800-959-3343 | 317-842-2600 | Auralex.com
9955 Westpoint Drive, Suite 101, Indianapolis IN USA 46256

938-1212.T'Fusor User Guide (01/13/2020 - 8:45 AM)


Installation & User Guide

Remove the second layer of release paper from each of the **EZ-Stick Pro Tabs**, carefully orient the panels position prior to contact with the wall, then press in place with moderate pressure.

The **T'Fusor** can be mounted using mechanical fasteners such as screws or nails but careful drilling of the flange will be required. Be sure to use the fastener appropriate for the type of wall construction.

The rear cavity of the **T'Fusor** can be filled with **Auralex Mineral Fiber Insulation** or covered with **Auralex PlatSheet™ / PlatFoam™** for low frequency absorption. When using **Mineral Fiber Insulation** use personal safety equipment appropriate for the handling of fiberglass.

For more information or assistance visit Auralex.com or call 800-959-3343

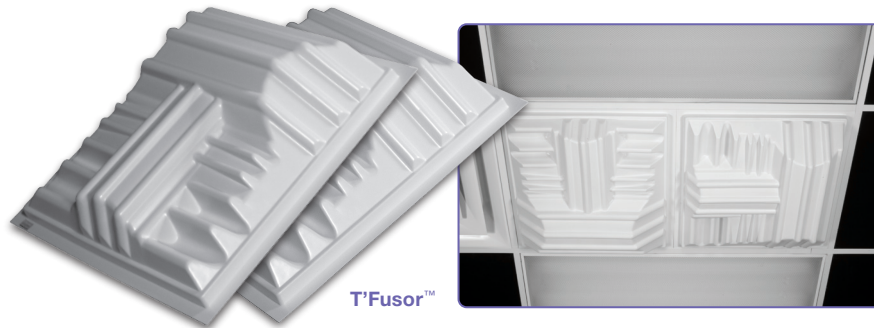

Real-World Acoustics®

1-800-959-3343 | 317-842-2600 | Auralex.com
9955 Westpoint Drive, Suite 101, Indianapolis IN USA 46256


Installation & User Guide

Remove the second layer of release paper from each of the **EZ-Stick Pro Tabs**, carefully orient the panels position prior to contact with the wall, then press in place with moderate pressure.

The **T'Fusor** can be mounted using mechanical fasteners such as screws or nails but careful drilling of the flange will be required. Be sure to use the fastener appropriate for the type of wall construction.

The rear cavity of the **T'Fusor** can be filled with **Auralex Mineral Fiber Insulation** or covered with **Auralex PlatSheet™ / PlatFoam™** for low frequency absorption. When using **Mineral Fiber Insulation** use personal safety equipment appropriate for the handling of fiberglass.

For more information or assistance visit Auralex.com or call 800-959-3343

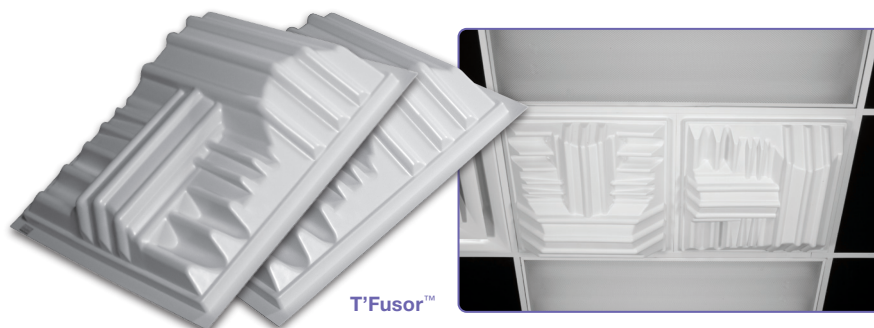

Real-World Acoustics®

1-800-959-3343 | 317-842-2600 | Auralex.com
9955 Westpoint Drive, Suite 101, Indianapolis IN USA 46256