

ProPanel™ Adhesive Mounting

Installation & User Guide

For mounting **Auralex® ProPanels™** to walls using only a liquid adhesive and no mechanical fasteners. **Auralex** recommends **Tubetak™ Pro Liquid Adhesive**.




Installation using Adhesive:

1. Make sure the wall is primed or painted with no dust or dirt and that the surface is flat with no protruding elements. Adhesives will not stick to dusty walls, walls treated with FR paints or vinyl wall covering - this must be removed prior to installation.
2. Mark the intended location of each panel on the wall.
3. With a putty knife, apply a thin coating of **Tubetak Pro** liquid adhesive in 4"x4" squares to the back of the panel at the target locations, spaced apart 18" on center. The purpose of this initial layer is to prime the substrate for better adhesion and to mark the locations for the next layer of adhesive. It is not necessary to allow this first layer of adhesive to dry or cure. Do not place any adhesive closer than 3" from the edge of the panel. (See figure 1)
4. Place adhesive dabs, about the size of a large egg, centered on each 4"x4" primed area.
5. Position the panel at marked installation location and press against the wall to flatten and spread out the adhesive.
6. Do not apply excessive pressure to a single or multiple small locations on the panel as this might crush or dent the fiberglass core.
7. **Block or support the panel for 24-48 hours while adhesive sets.**

NOTE: Use only water-based, heavy-bodied adhesives, such as **Tubetak Pro**, when installing panels. Do not apply adhesive in a "ribbon" pattern.

NOTE: Due to variations in fiberglass thickness and wall flatness, some shimming may be required to align the panel edges.

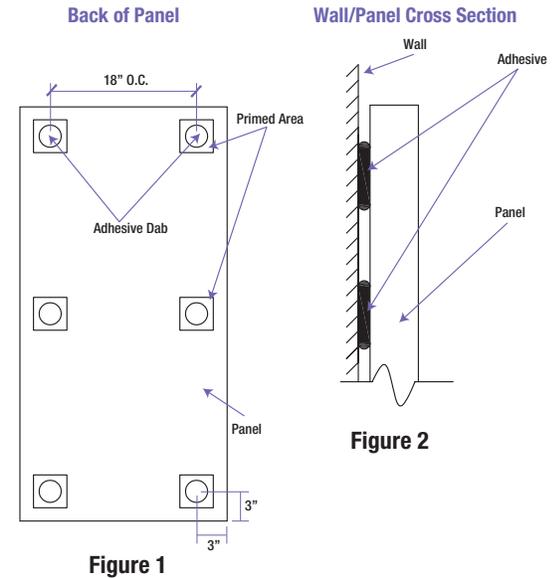

1-800-959-3343 | 317-842-2600 | Auralex.com
9955 Westpoint Drive, Suite 101, Indianapolis IN USA 46256

1290-315.ProPanel Adhesive Mounting Guide (01/13/2020 - 10:05 AM)

Real-World Acoustics®

ProPanel™ Adhesive Mounting

Installation & User Guide

For mounting **Auralex® ProPanels™** to walls using only a liquid adhesive and no mechanical fasteners. **Auralex** recommends **Tubetak™ Pro Liquid Adhesive**.




Installation using Adhesive:

1. Make sure the wall is primed or painted with no dust or dirt and that the surface is flat with no protruding elements. Adhesives will not stick to dusty walls, walls treated with FR paints or vinyl wall covering - this must be removed prior to installation.
2. Mark the intended location of each panel on the wall.
3. With a putty knife, apply a thin coating of **Tubetak Pro** liquid adhesive in 4"x4" squares to the back of the panel at the target locations, spaced apart 18" on center. The purpose of this initial layer is to prime the substrate for better adhesion and to mark the locations for the next layer of adhesive. It is not necessary to allow this first layer of adhesive to dry or cure. Do not place any adhesive closer than 3" from the edge of the panel. (See figure 1)
4. Place adhesive dabs, about the size of a large egg, centered on each 4"x4" primed area.
5. Position the panel at marked installation location and press against the wall to flatten and spread out the adhesive.
6. Do not apply excessive pressure to a single or multiple small locations on the panel as this might crush or dent the fiberglass core.
7. **Block or support the panel for 24-48 hours while adhesive sets.**

NOTE: Use only water-based, heavy-bodied adhesives, such as **Tubetak Pro**, when installing panels. Do not apply adhesive in a "ribbon" pattern.

NOTE: Due to variations in fiberglass thickness and wall flatness, some shimming may be required to align the panel edges.

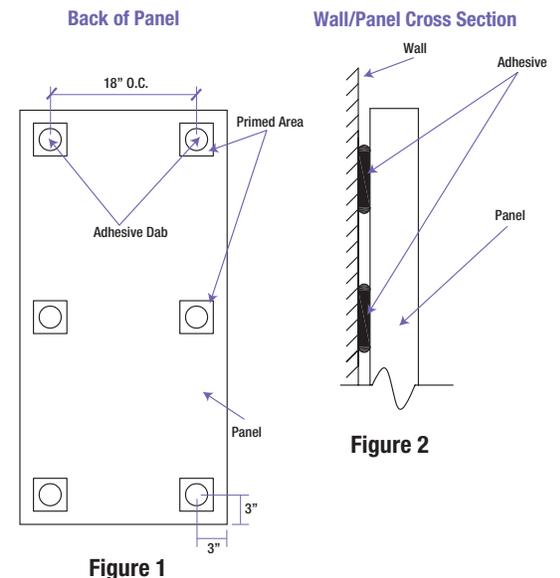

1-800-959-3343 | 317-842-2600 | Auralex.com
9955 Westpoint Drive, Suite 101, Indianapolis IN USA 46256

1290-315.ProPanel Adhesive Mounting Guide (01/13/2020 - 10:05 AM)

Real-World Acoustics®