

TubeTak Pro™ Liquid Adhesive

Installation & User Guide



DIRECTIONS: *(Gray formulation. White formulation refer to package instructions.)*

To assure positive adhesion, surfaces must be clean, dry and free of foreign materials.

New drywall must be primed and painted.

Cut the tip off the threaded nozzle feature on the front of the tube and screw the application nozzle onto the tube. Cut approximately 1" off of the tip of the application nozzle, at an angle.

Apply a continuous bead of adhesive to the back of the foam about 1-1½" from the edges, then apply an X or zigzag in the center (*see Fig. A*). The application pattern shown in Figure B will use more adhesive but is more effective on surfaces that are difficult to adhere to.

Immediately flatten the applied beads of adhesive with a putty knife and apply the foam panel to the wall or ceiling. There is no need to wait for Tubetak to tack up. Press firmly over the entire surface of the panel to achieve a proper bond.

TubeTak Pro is considered a permanent installation. Removing the panel after the adhesive has cured can result in some damage to the **Studiofoam** and the mounting surface. Try using a sharp knife to carefully separate the panel from the adhesive to minimize tearing. Use a citrus based adhesive remover to clean the adhesive from the wall. **Auralex** is not responsible for any damage to walls, the ceiling or the overall structure that occurs during installation or removal of our products.

CURE TIME:

- Skin Time: 30 minutes
- Tack Free: 45 minutes
- Normal Curing: 24 hours
- Service Temperature Range: -75° F (-59°C) to 225° F (107°C)

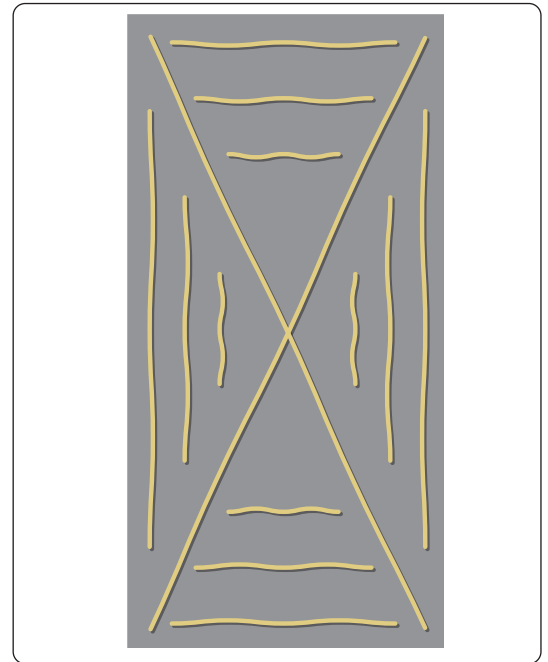


Fig. A

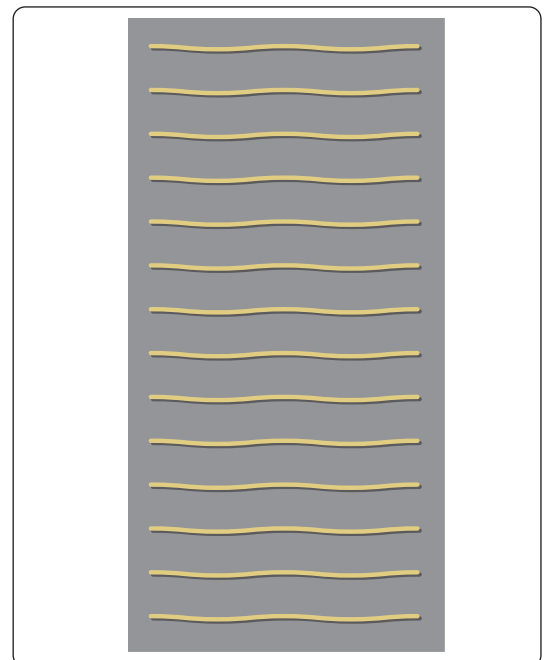


Fig. B

Auralex® Acoustics, Inc.

1-800-959-3343 | 317-842-2600 | Auralex.com
9955 Westpoint Drive, Suite 101, Indianapolis IN USA 46256

Real-World Acoustics®