

# ProGO™ 26 & ProGO™ 44

## Installation & User Guide



Thank you for purchasing the Auralex® ProGO. This is a highly effective portable acoustic absorption device that can be easily positioned anywhere in a room to achieve the desired acoustical tuning.


### The ProGO-44 Contains:

- (1) 48" x 48" ProGO absorption panel
- (2) 12" x 24" Base plate with eight through holes. There are five sets of pilot holes on the bottom for the addition of the optional caster kits.
- (4) 22" x 7.75" Upright panels
- (16) Screws
- (8) Rubber isolation feet
- (1) 20" x 20" x 1" (50.8 cm x 50.8 cm x 2.54 cm) EPS pad

### The ProGO-26 Contains:

- (1) 24" x 72" ProGO absorption panel
- (1) 12" x 24" Base plate with eight through holes. There are five sets of pilot holes on the bottom for the addition of the optional caster kit.
- (2) 22" x 7.75" Upright panels
- (8) Screws
- (4) Rubber isolation feet


**NOTE:** The four pilot holes in the bottom, unfinished edges of the upright panels

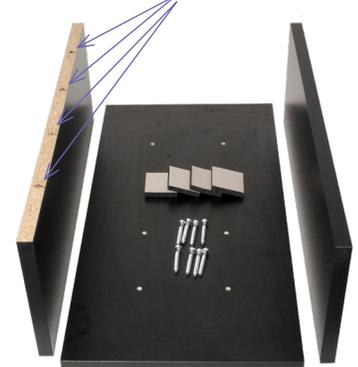

1. Unpack the ProGO panel assembly and set aside.
2. Retain the Expanded Polystyrene (EPS) packing pad for stand assembly.


**TOOLS NEEDED:** #3 Phillips screw driver. **A power driver with adjustable clutch is recommended. Start with a lower clutch setting to avoid stripping screw heads or the wood panels!**

3. Place the 20" (50.8) cm square sheet of EPS on a flat rigid work surface.
4. Stand the bottom panel on end with the top surface next to the EPS pad.
5. Insert one of the supplied screws through one of the upper holes in the base from the bottom side (the side containing the five sets of pilot holes).
6. Position one of the upright panels on top of the EPS pad and perpendicular to the top surface of the bottom panel.
7. Align the tip of the screw with the appropriate pilot hole in the bottom edge of the upright panel and start by hand.
8. Insert the remaining three screws through the base panel, align with the corresponding holes and snug by hand.
9. Tighten the screws with a power screw driver.
10. Repeat this process for the remaining upright panel.

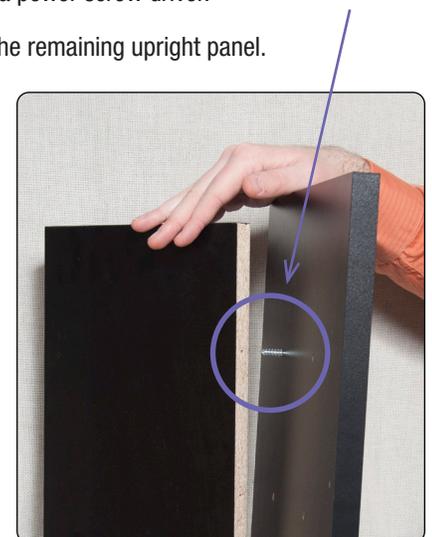

## Installation & User Guide

11. Apply the supplied rubber isolation feet to the bottom corners of the base if casters will not be added. Delete this step if casters will be installed and refer to the installation guide supplied with the ProGO caster kit.

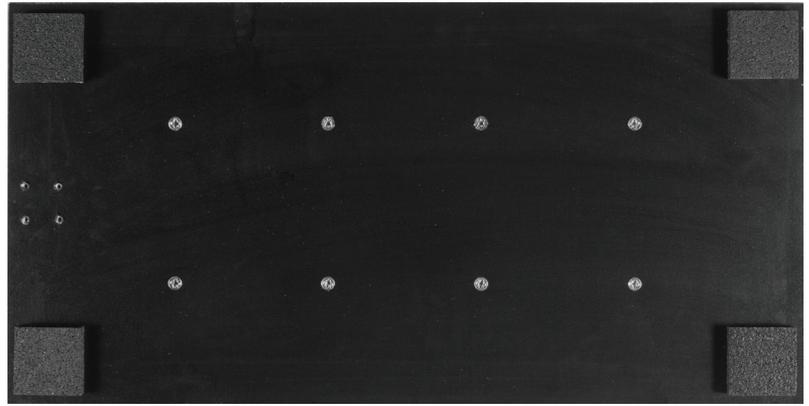

12. Insert the ProGO panel assembly into the space between uprights of the assembled base.



ProGO-44



ProGO-26

