

Each Kit Includes:

SonoLite™ SonoKit-1™:

- (8) SonoLite Panels
- (2) SonoLite Bass Traps
- (40) EZ-Stick Pro Tabs

SonoLite™

SonoKit-2™:

- (12) SonoLite Panels
- (4) SonoLite Bass Traps
- (64) EZ-Stick Pro Tabs


WALL INSTALLATION:

Auralex® EZ-Stick™ Pro Tabs included:

NOTE: EZ-Stick Pro Tabs are permanent and will cause damage to mounting surface or product upon removal.

- 1 Using a level, locate where the panels will hang. Use a pencil to mark the final **SonoLite Panel** locations on the walls, and **SonoLite Bass Trap** locations in the corners of the room where the walls and/or ceiling meet.
- 2 Spot clean the target attachment points on wall with rubbing alcohol.
- 3 Separate the **EZ-Stick Pro** tabs from each other. Remove one of the release layers from the tab and attach to the rear surface of the **SonoLite Panel** just inboard of the fabric edge or attach to the rear mitered surface of the **SonoLite Bass Trap**. Press firmly and hold for 30 seconds for best adhesion. Repeat for the remaining tabs.
(use 4 tabs per panel)
- 4 Remove the second release layer from all of the **EZ-Stick Pro** tabs, align with the locating marks on the wall and press firmly on the front side of the panel, opposite the tabs to adhere to the wall.

SonoLite™

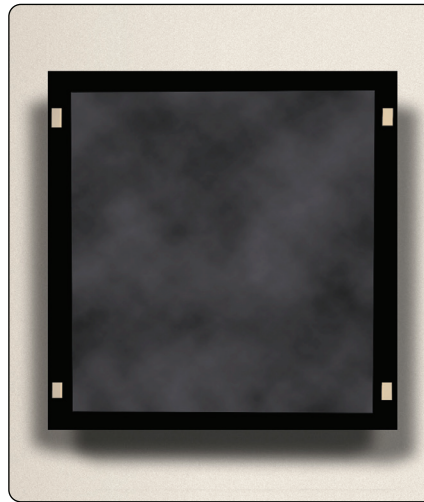

SonoLite™ Bass Trap



Thank you for purchasing **SonoLite™ Absorption Panels**. They are a great solution to improve both the aesthetics and sonic clarity of any home studio or small home theater.