

Sunburst-360s™ w/ Mini-LENRDs™


Installation & User Guide

Thank you for purchasing the **Auralex® Sunburst-360™**. This is a highly effective portable acoustic absorption device that can be easily positioned anywhere in a room to achieve the desired effect.



- 1 Set up stand by firmly tightening the pole into the base. Extend the top tube and firmly tighten the adjustment collar.




- 2 Remove star washer from the top of the stand.

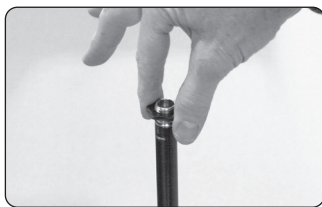

- 3 Lay the **Sunburst-360** on a flat surface and remove the four **Sunburst 'Mini-LENRD'** panels. Open up the slit in the side of the center part and remove the foam tube from the stand hole. The **'Mini-LENRDs'** can be mounted in your room's corners as low frequency absorbers or configured together on the wall for broadband absorption. Several different **Auralex** adhesive solutions can be used to mount these panels, see **Auralex.com** for more information.

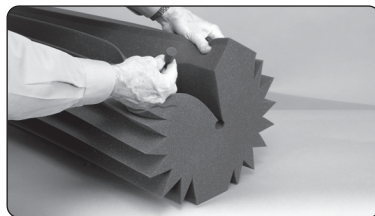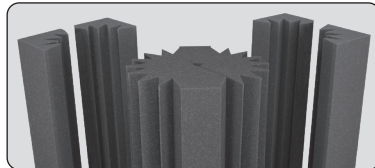

- 4 Position the **Sunburst-360** in your room where control of acoustical reflections is needed. Corner placement will emphasize absorption of low frequencies.

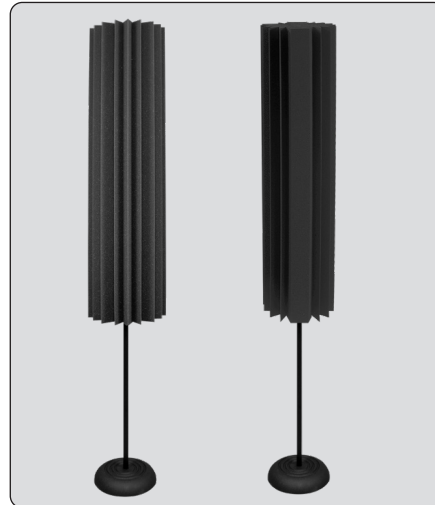

1-800-959-3343 | 317-842-2600 | Auralex.com
9955 Westpoint Drive, Suite 101, Indianapolis IN USA 46256

Real-World Acoustics®

1722-1018.Sunburst-360 User Guide (03/05/2020 - 1:21 PM)

Sunburst-360s™ w/ Mini-LENRDs™


Installation & User Guide

Thank you for purchasing the **Auralex® Sunburst-360™**. This is a highly effective portable acoustic absorption device that can be easily positioned anywhere in a room to achieve the desired effect.



- 1 Set up stand by firmly tightening the pole into the base. Extend the top tube and firmly tighten the adjustment collar.




- 2 Remove star washer from the top of the stand.

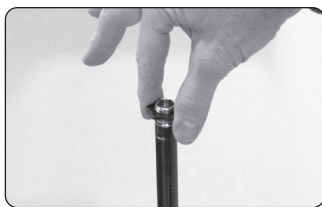

- 3 Lay the **Sunburst-360** on a flat surface and remove the four **Sunburst 'Mini-LENRD'** panels. Open up the slit in the side of the center part and remove the foam tube from the stand hole. The **'Mini-LENRDs'** can be mounted in your room's corners as low frequency absorbers or configured together on the wall for broadband absorption. Several different **Auralex** adhesive solutions can be used to mount these panels, see **Auralex.com** for more information.

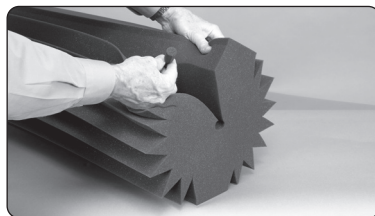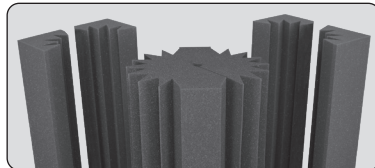

- 4 Position the **Sunburst-360** in your room where control of acoustical reflections is needed. Corner placement will emphasize absorption of low frequencies.

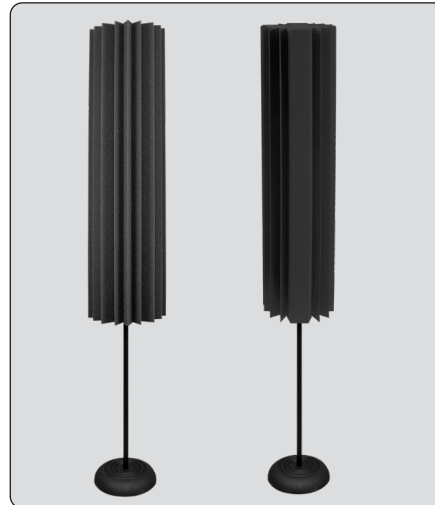

1-800-959-3343 | 317-842-2600 | Auralex.com
9955 Westpoint Drive, Suite 101, Indianapolis IN USA 46256

Real-World Acoustics®

1722-1018.Sunburst-360 User Guide (03/05/2020 - 1:21 PM)

